


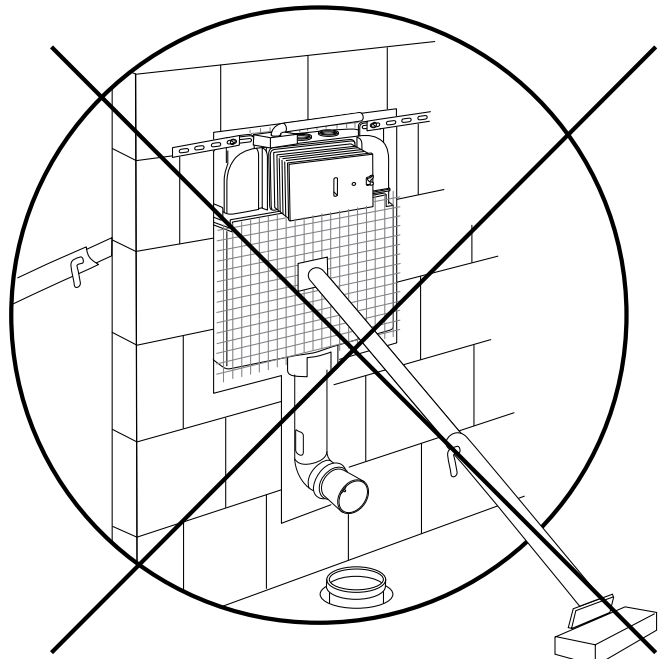
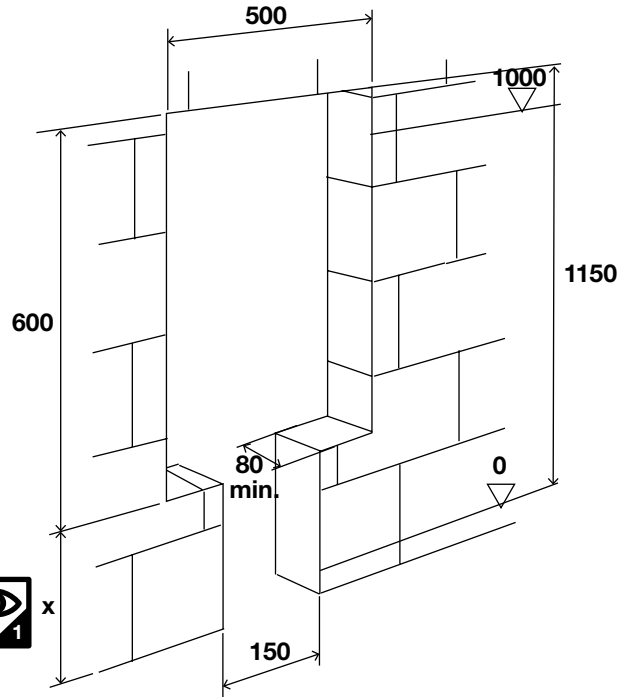
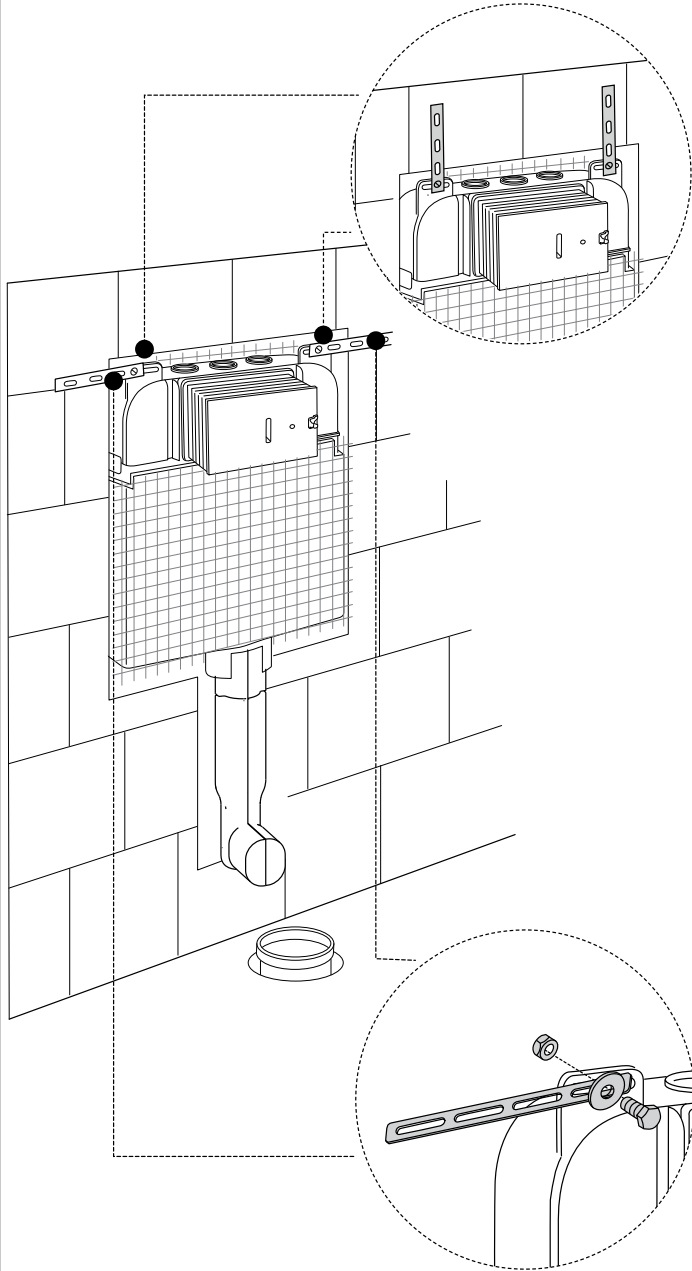
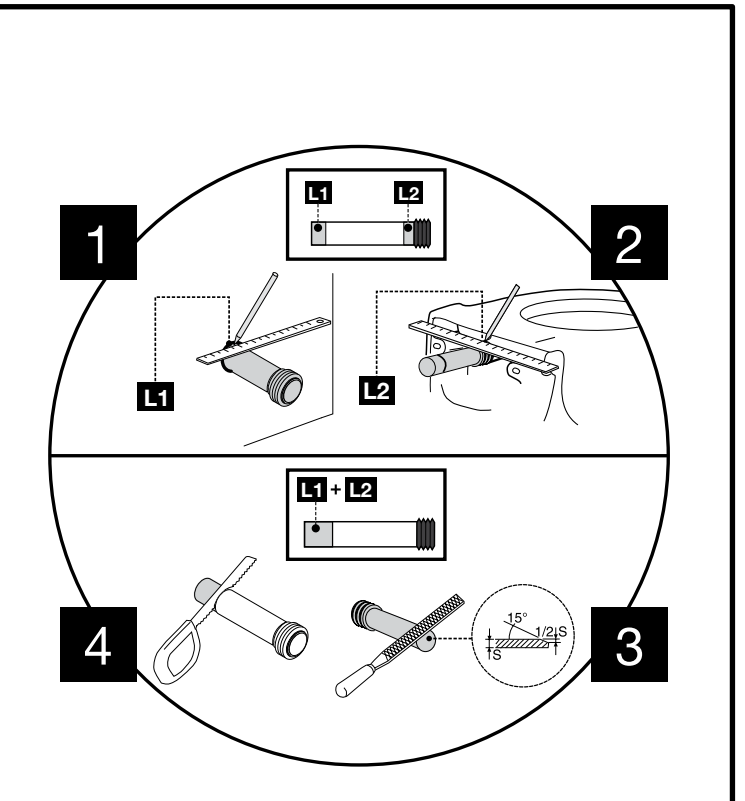
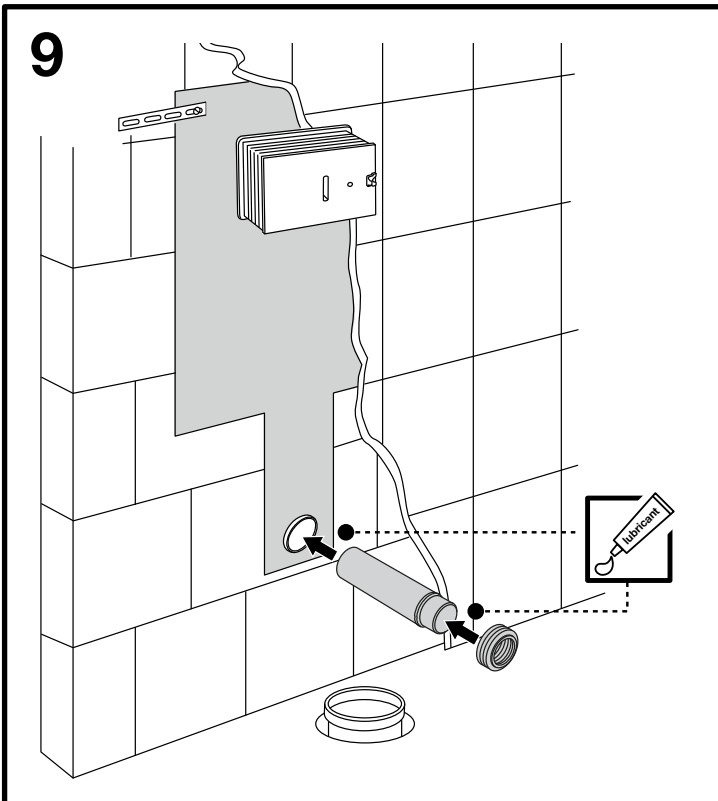
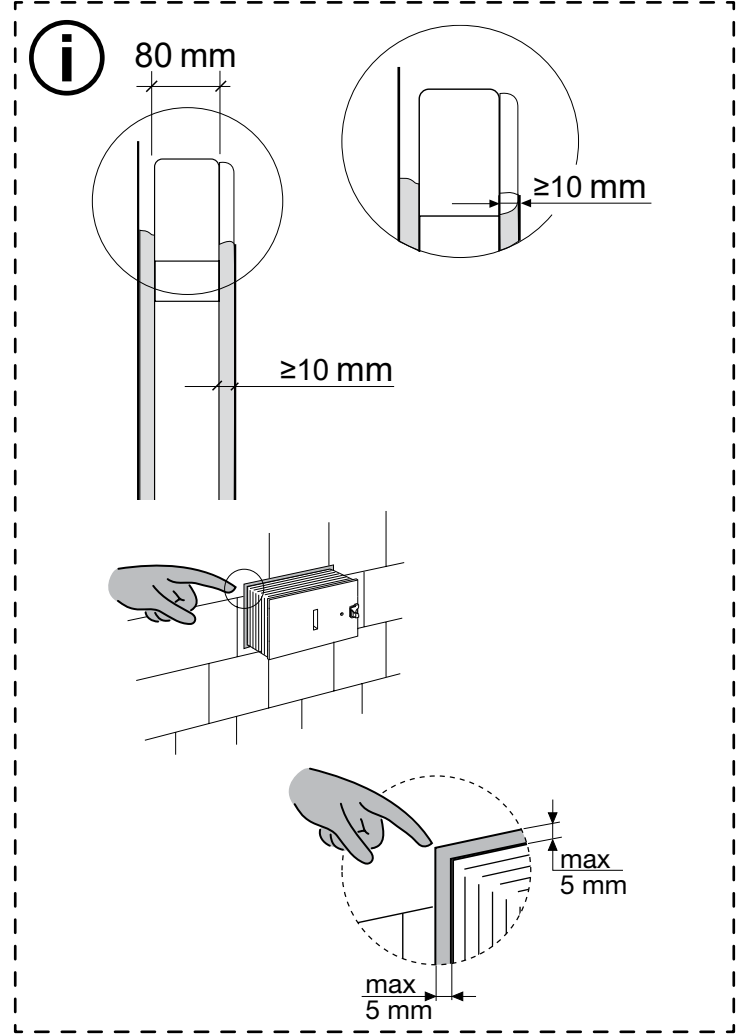





7

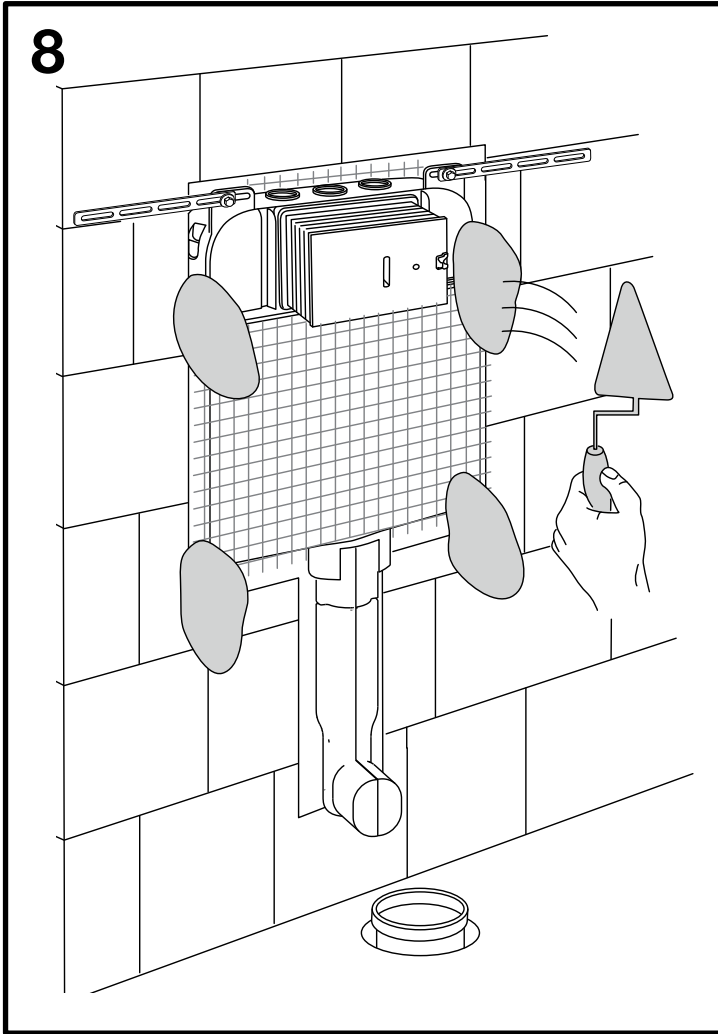







**DRY WALL FIXING KIT
216640**

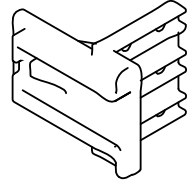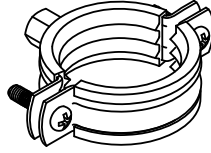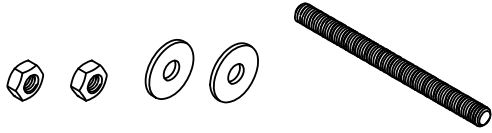


7

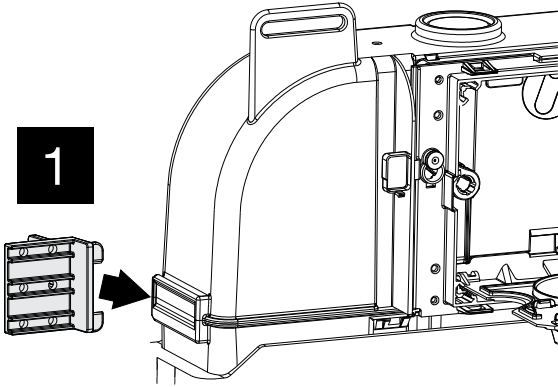



2

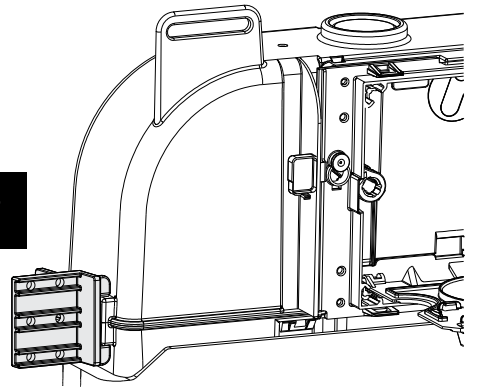


8

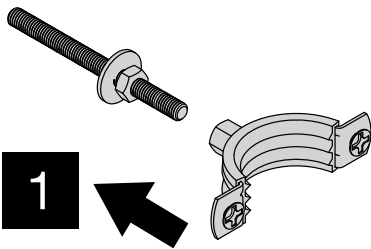





2

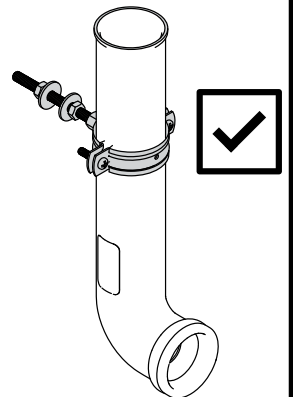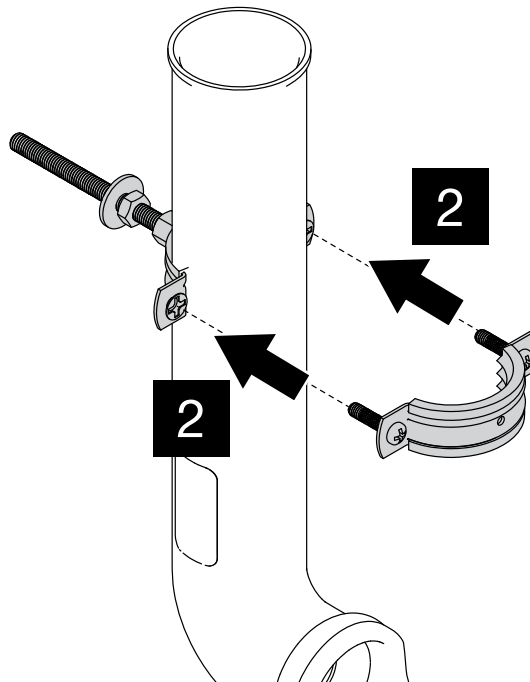




**DRY WALL FIXING KIT
216640**



9

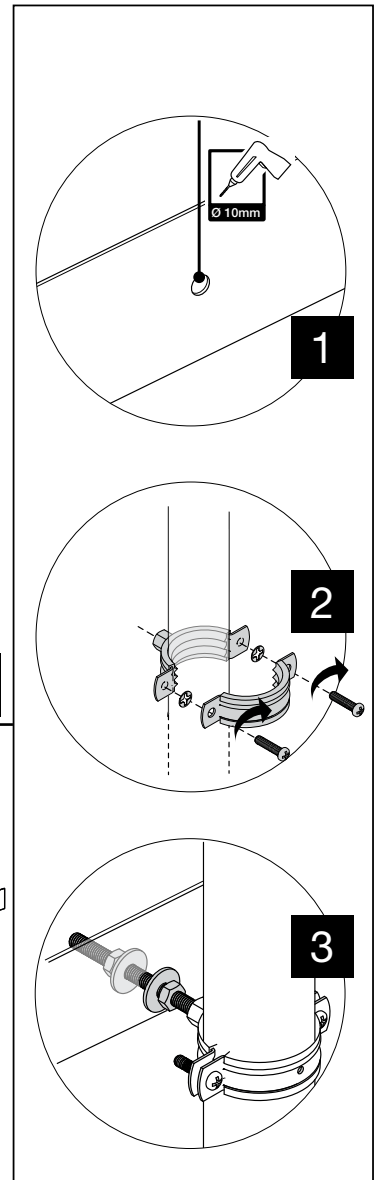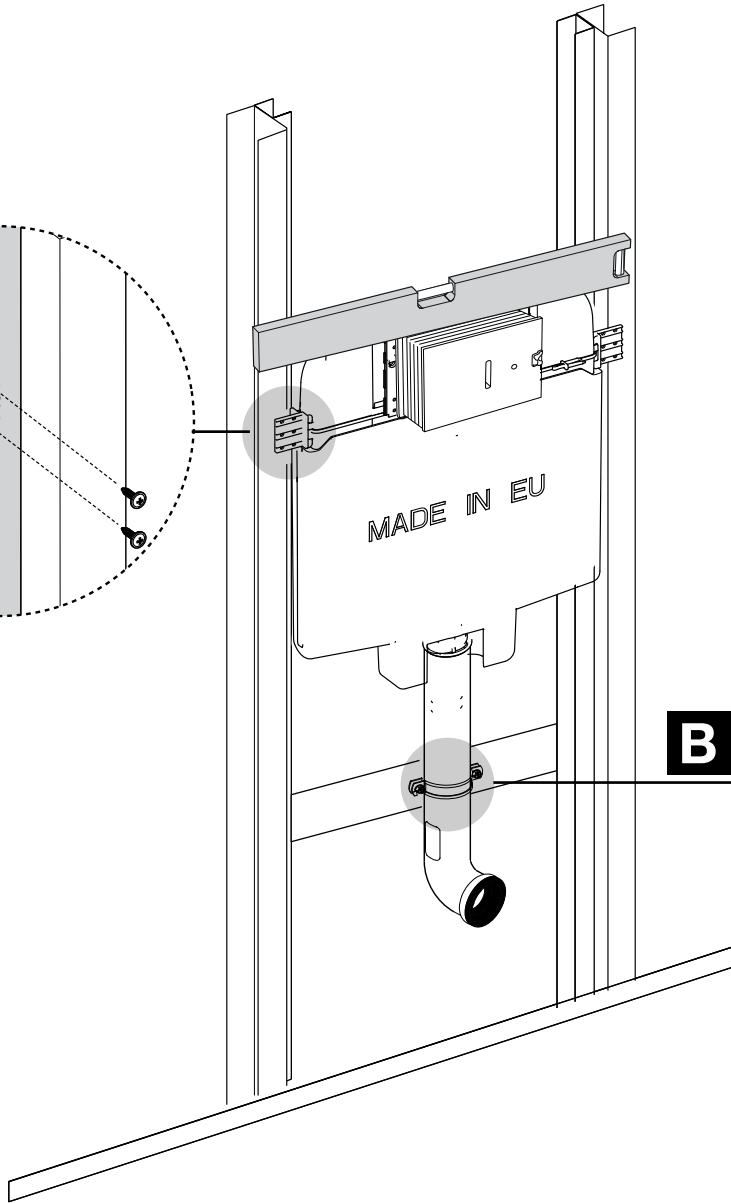
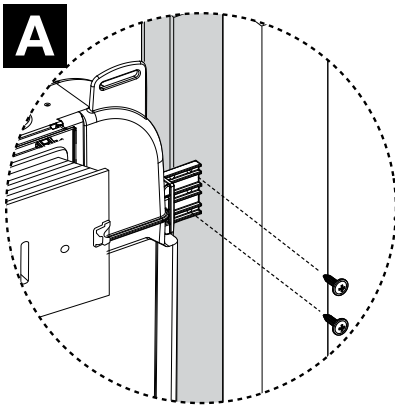
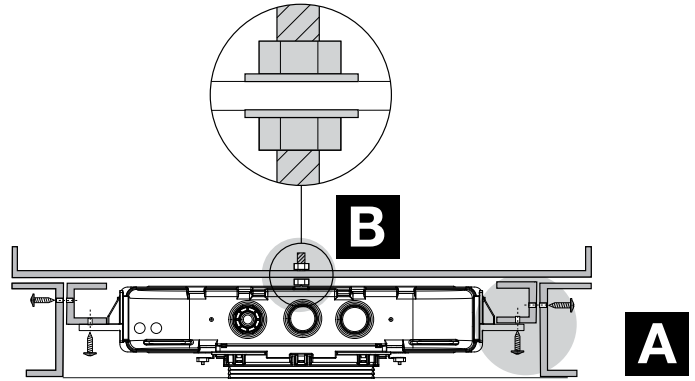





DRY WALL FIXING KIT
216640

10

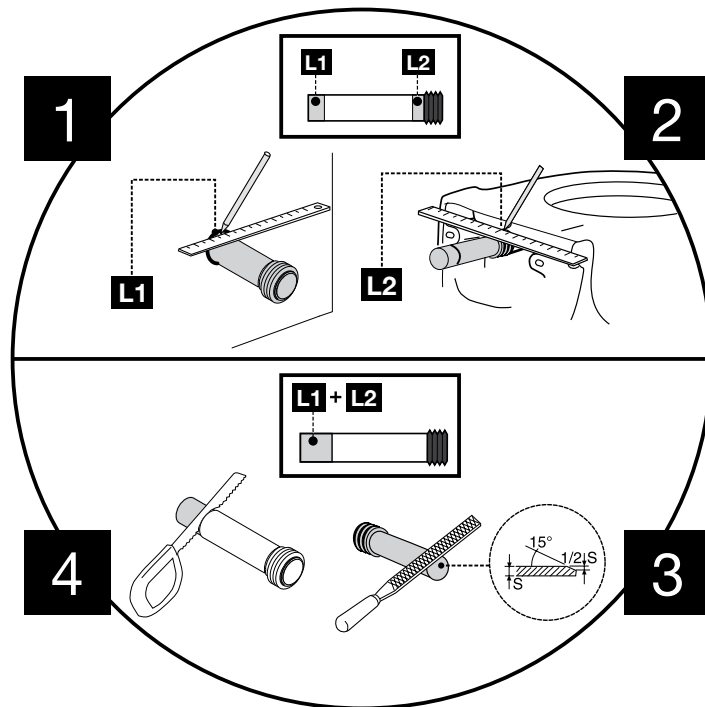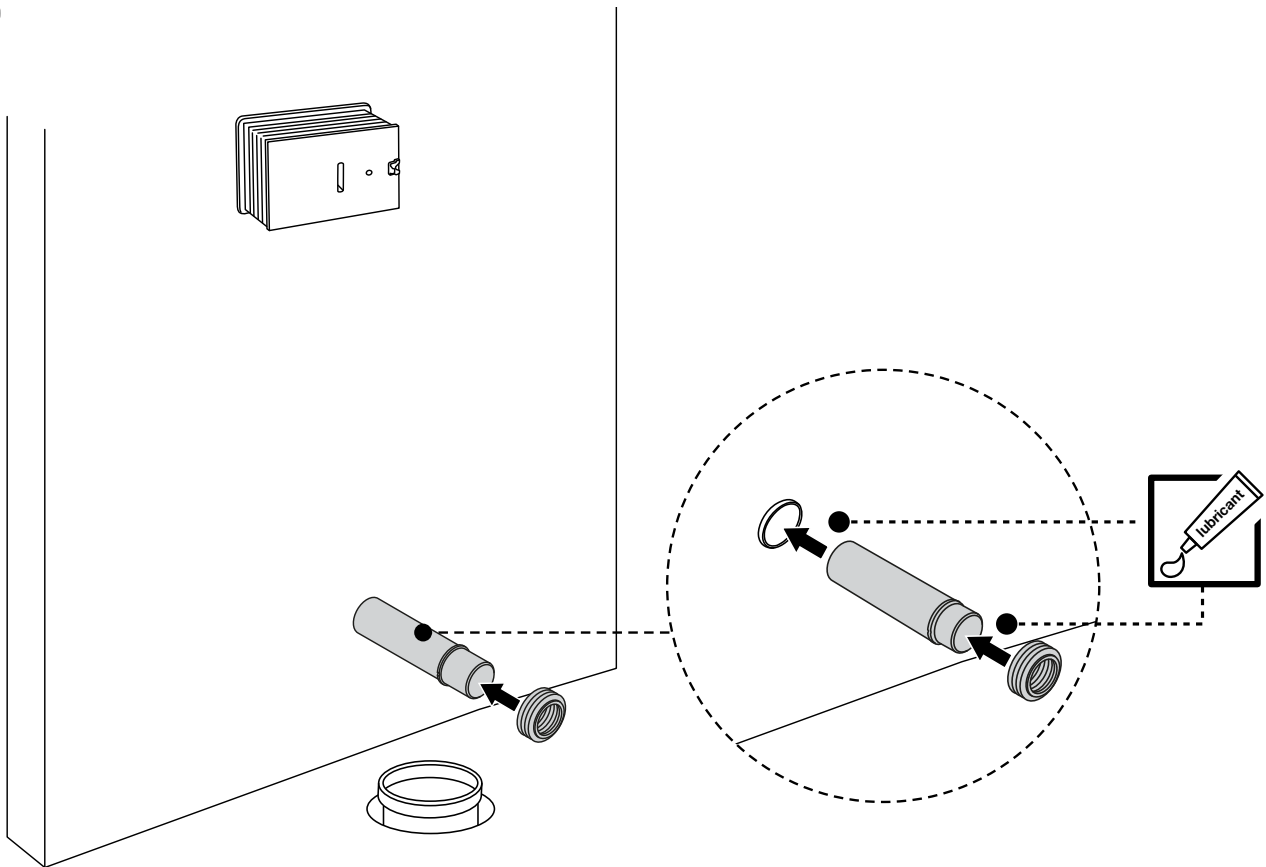


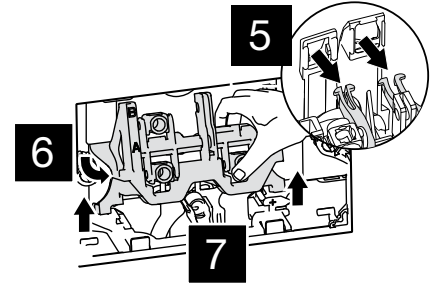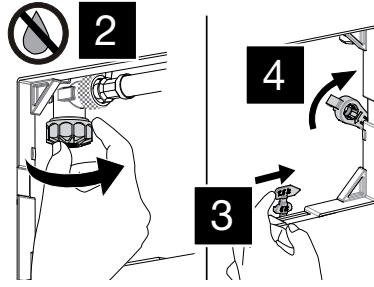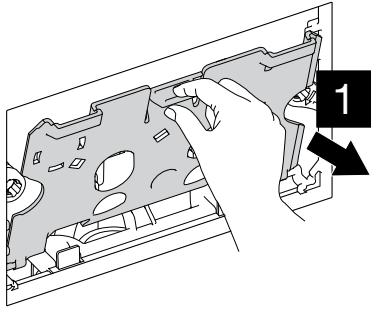


CLICK!!

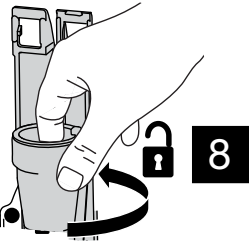


8

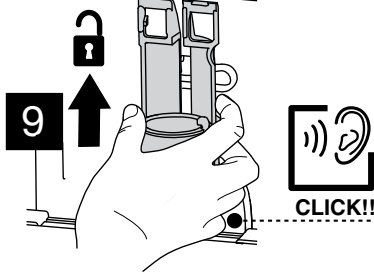


CLICK!!

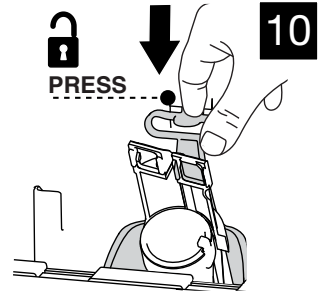

10

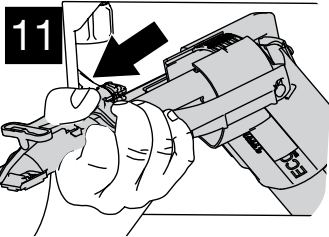


11

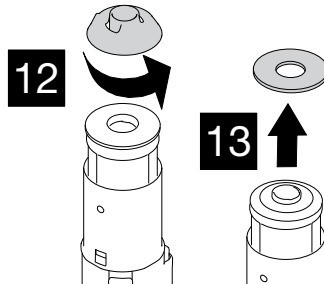

12

13

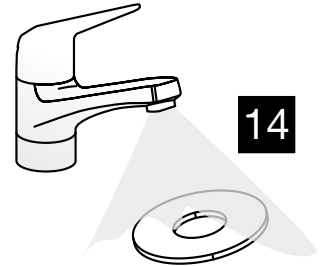

14

